


# JETSTREAM

## SWITCHING POWER SUPPLY

### JTPS45 User Manual

Specifications and Features:

- 45 Amps MAX, 40 Amps Continuous at 13.8 Vdc
- Front Panel Adjustable Voltage(9-15Vdc)
- Light weight, only 8.8lbs/4kg
- Compact, only 8 7/8"W\*4 1/2" H\*8 1/2"D
- Easy access output:
  - Five-Way binding post for HF/VHF radio
  - Cigarette Lighter Socket for mobile accessories
  - 2Pair of quick connectors on Front panel
- Over Voltage protection
- Over Current protection
- Automatic shut-down on fault load
- Lighted Dual Meters: Volt-meter and Amp-meter monitor load continuously.
- Quiet internal Cooling Fan with "FAN ON" LED
- Input Voltage: Switchable AC input voltage
  - 110 Vac at 47-62Hz
  - 220 Vac at 47-63Hz
- Regulation: Works with AC input from 85 to 135 Vac or from 170 to 260 Vac.
- **AC Line Fuses:110 Volt/10 Amps or 220 Volt/5 Amps**

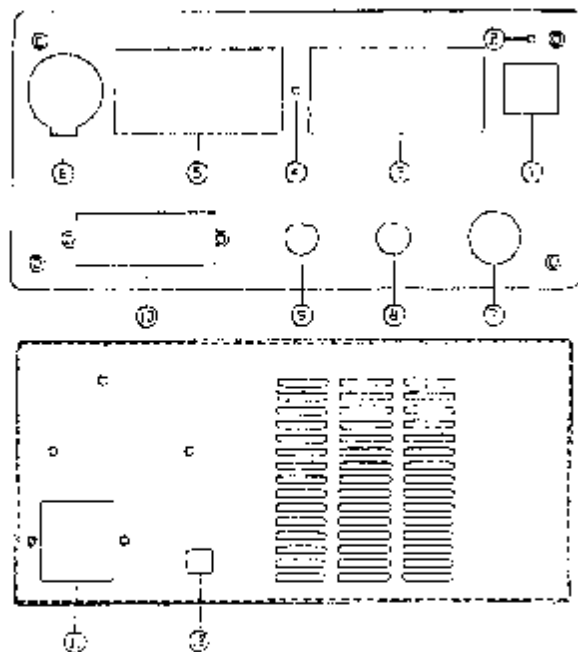

1. POWER SWITCH
2. POWER ON INDICATOR
3. VOLT-METER
4. FAN CONTROL LED
5. AMP-METER
6. CIGARETTE LIGHTER SOCKET
7. DC ADJUSTMENT CONTROL
8. DC OUT (+)
9. DC OUT (-)
10. QUICK CONNECTORS
11. AC INPUT SOCKET
12. 110V-220V VOLTAGE SELECT

## Instruction Manual

Thank you for purchasing the **JETSTREAM** Deluxe Switching Power Supply . The JTPS45 is designed to supply up to 45 amps maximum current or 40 amps continuous current at 13.8 Vdc.

### INSTALLATION:

Before plugging in the JTPS45 in an AC outlet make sure that the proper input voltage is selected on the rear of the unit. Select 115 for 100/110/120 AC operation or 230 for 200/220/240 AC operation. JTPS45 is factory set for 110V .

The loads can be connected to either the 5-way binding posts or to the cigarette lighter socket. Note that any devices that require more than 7 amps must use the 5-Way binding post output. The cigarette lighter socket output has a maximum output of 7 amps.

### OPERATION:

**DC Adjustment:** The DC adjustment control on the front panel is used to set the DC output voltage of the JTPS45 from 9 volts to 15 volts DC . For most HF and VHF radios , set the output at 13.8Vdc.

**FAN:** The cooling fan on the JTPS45 will operate when the unit is turned ON. The speed of the fan varies depending on the temperature control circuit the speed of the fan ,the brighten the yellow LED is the faster the fan is working.

**Meter Indicators :** The current meter on the JTPS45 indicates the total current being drawn by the accessories connected to the power supply. The voltage meter on the JTPS45 indicates the voltage set for the 5-way binding pose output, the cigarette socket output , and the quick connector output .Both meters will be lit when the unit is turned ON. When The DC voltage is adjusting. It won't affect the brightness of the lamps inside the volt/amp meters.

### PROTECTION:

The JTPS45 will automatically shut off if over 50 amps of current is drawn from its outputs. To reset, turn the unit OFF and wait 20 seconds, then turn the unit back on.

The JTPS45 has a 110volt/10amp or 220volt/5amp fuse in the power cord connection on the back of the unit. The JTPS45 has two slots for these fuses. The slot closest to the unit locks the fuse in place and then becomes part of the circuit. The slot at the rear of the tray is a place to store a spare fuse for emergency cases.